


TOORX
PROFESSIONAL LINE

INSTRUCTION

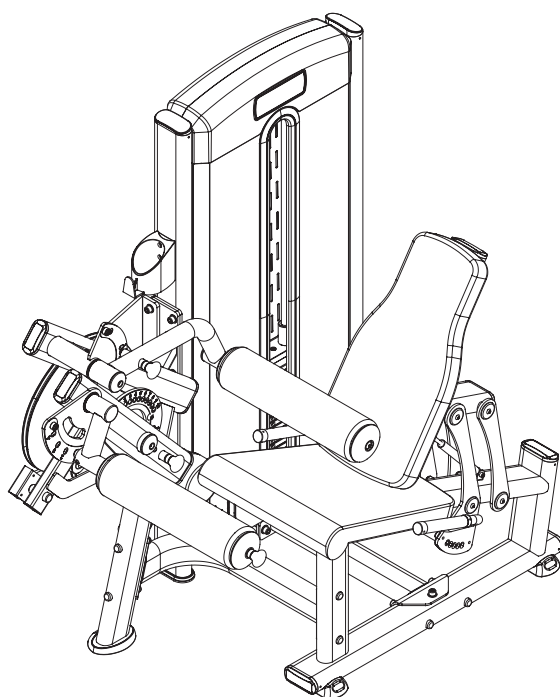

LEG EXTENSION - LEG CURL

PLX 5600




Cod: GRLDTOORXPLX5600

Rev : 03

Ed : 05/23


DESIGN ILLUSTRATION

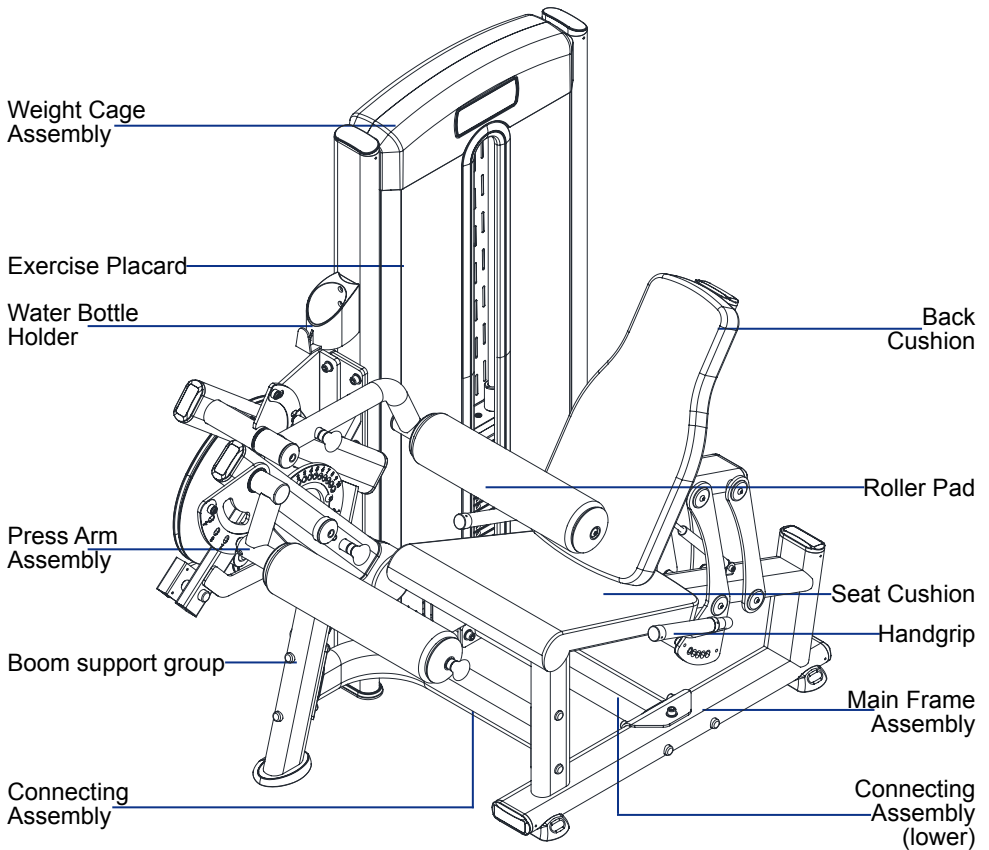

SPECIFICATIONS

Unit Dimensions: 1530mm(L)×1060mm(W)×1530mm(H)

User Weight ≤ 150kg

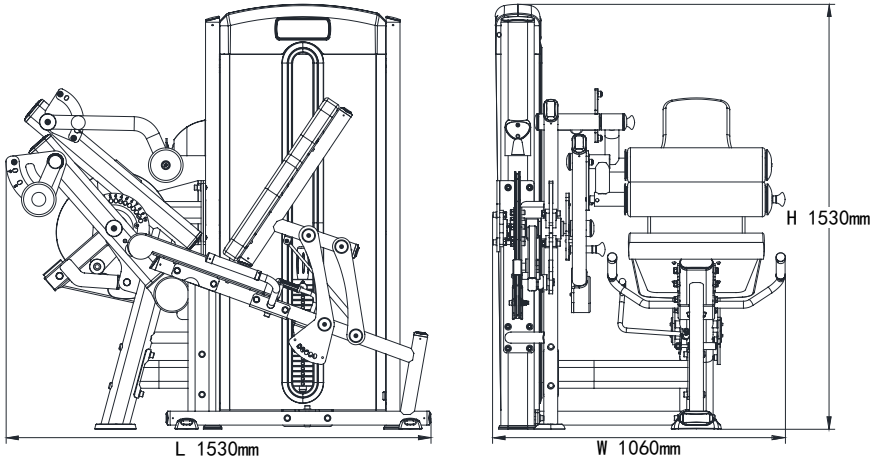

ASSEMBLY TOOLS

NO.	NAME	SPECIFICATION	QUANTITY
1	Screwdriver	Philips	1
2	Open-ended Spanner	17-19	2
3	Socket Wrench	19	1
4	Allen Wrench	8mm	1
5	Allen Wrench	6mm	1
6	Allen Wrench	5mm	1
7	Allen Wrench	4mm	1
8	Allen Wrench	3mm	1

ASSEMBLY INSTRUCTIONS

1.As the unit has a large size, please assemble it in a space which is big enough.

2.Open the packing box, take out the parts and remove packing materials. Classify all parts and tidily put them on vacant floor.

3.Ensure that it's correctly assembled and the parts are complete according to assembly steps.

4.It requires at least two persons.

I.Assemble Weight Cage

1.Attach front shroud, decorative strip and upper cap to tower frame.

2.Assemble weight plates. Insert two guide rods into the corresponding mounting holes on the lower part of weight cage; pass them through shock pads; pass them through weight plates successively.

3.Assemble head plate. Now the weight plates are assembled.

4.Assemble circlips on the upper parts of two guide rods; fix guide rods.

5.Pass steel cable through cord lock; fasten steel cable with screws.

① Tighten the 3 screws as much as possible.

② The bolt must make at least 10 turns towards the selector bar.


③ Tighten hexagon nut.

6.Assemble steel cable as the diagram shows; check whether all the pulleys move smoothly.

7.Assemble rear shroud; fasten it to tower frame with designated screws.

8.Assemble water bottle holder; fasten it to tower frame with designated screws.

9.Now the weight cage is assembled.

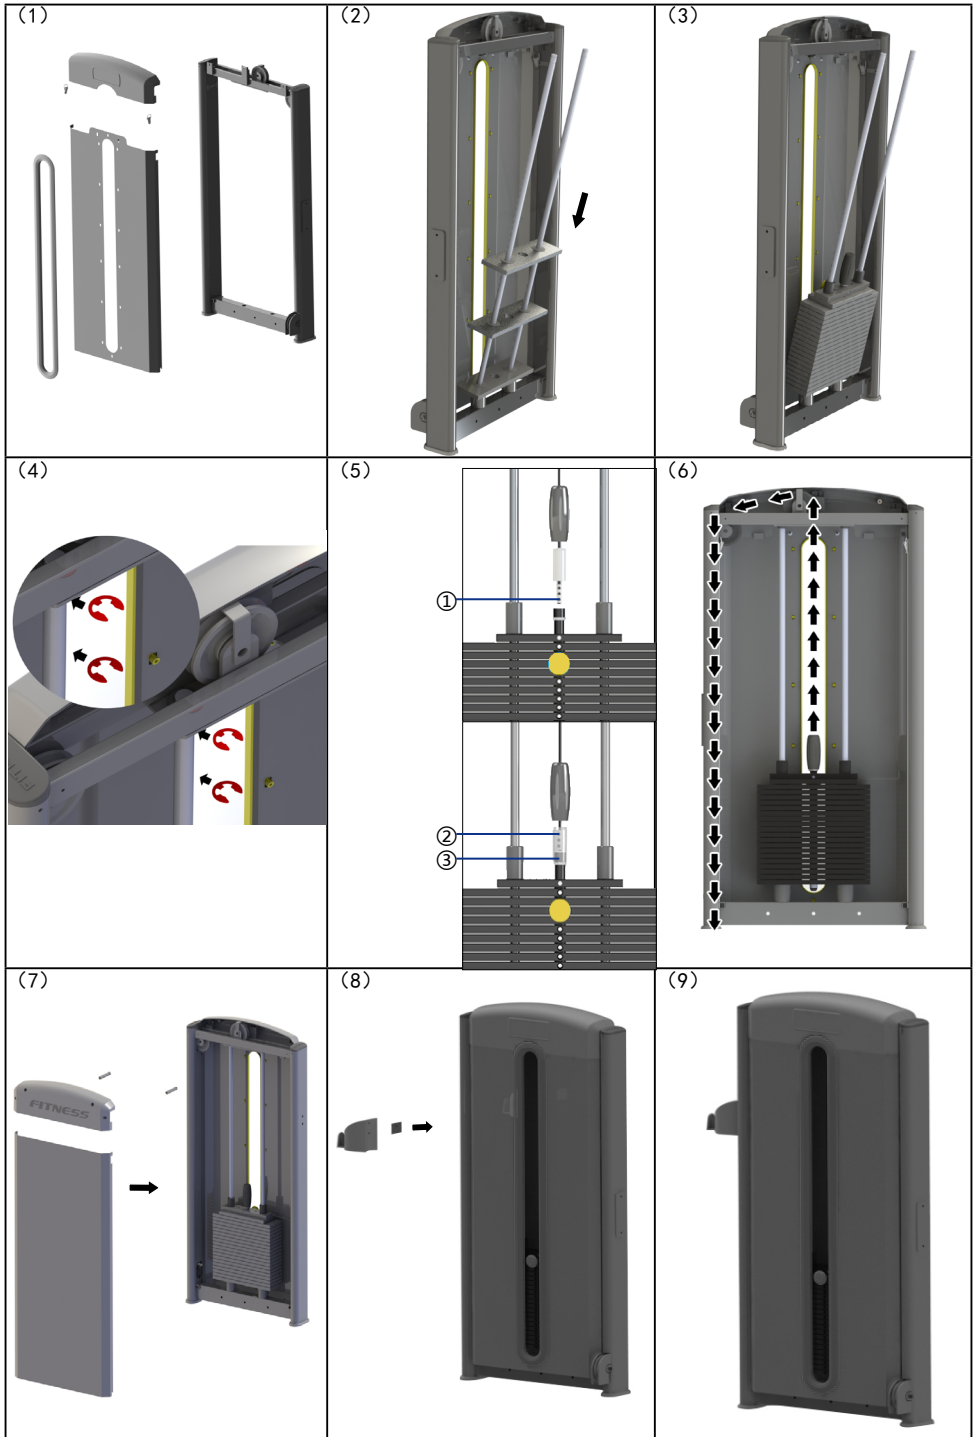

II.Assemble User Frame

1. Put the assembled Weight Cage in the area where the machine will be used. Check whether all the other parts are there according to the diagrams below; remove packing materials and place the parts tidily. Assemble Main Frame; as the diagram shows, attach Upper and Lower Connecting & Supporting Assemblies (AE1; AE2) and Boom support group (AD1) to Weight Cage, fasten Main Frame Weldment Assembly (AC1) to Connecting & Supporting Assemblies. (Diagram 1)

2. Fasten Transmission welding group (AD3), Rope disc fixing group (AD4), Adjusting the disc welding group (AD5), Boom welding group (AD6), Bearing fixing plate (D11), and Auxiliary counterweight block (D13) to Main Frame Weldment Assembly. Tighten all the set bolts. Fix and adjust steel cable, ensuring that it moves smoothly without any twist or slack. (Diagram 2)

3. Assemble Leg pad welding group (AD7) and Leg pressing pad welding group (AH1) to Main Frame Weldment Assembly. Tighten all the set bolts. (Diagram 3)

4. Assemble Seat plate welding group (AC2), Handle welding group (AD2), Backrest welding group (AD6), Left handle group (AF1), Right handle group (AF2), Backrest Cushion (M501-J01) and Seat Cushion (D13-J03) to Main Frame Weldment Assembly. Tighten all the set bolts. (Diagram 4)

5. Assemble steel cable as the diagram shows; make sure that it moves along the trajectory as the arrow shows. (Diagram 5)

6. Recheck all links and tighten all screws in case of slack.

7. Finally, a trial must be taken by professional to assure that it's correctly assembled.


(1)

REF#	DESCRIPTION	SPEC.	QTY.
AB1	Counterweight box group		1
AC1	Main frame welding group		1
AD1	Boom support group		1
AE1	Lower connecting support group		1
AE2	Front connection support group		1
GB173	Socket head cap screw	M12*30	17
GB91	Flat washer	M12	17
GB211	Spring washer	M12	17

(2)


REF#	DESCRIPTION	SPEC.	QTY.
AD3	Transmission welding group		1
AD4	Rope disc fixing group		1
AD5	Adjusting the disc welding group		1
AD6	Boom welding group		1
D11	Bearing fixing plate		1
D06	Spacer sleeve	φ30	1
D13	Auxiliary counterweight block	φ130*60	1
M422	Flat aluminum end cover	φ60	1
GB118	Deep groove ball bearing	GB6005	2
GB50	Hexagon socket flat round head screw	M8*25	2
GB34	Hexagon socket head cap screw	M12*40	2
GB36	Hexagon socket head cap screw	M12*50	2
GB173	Hexagon socket head cap screw	M12*30	2
GB89	Flat washer	M8	1
GB91	Flat washer	M12	10
GB92	Spring washer	M8	1
GB211	Spring washer	M12	2
GB84	Hexagon lock nut	M12	2

(3)

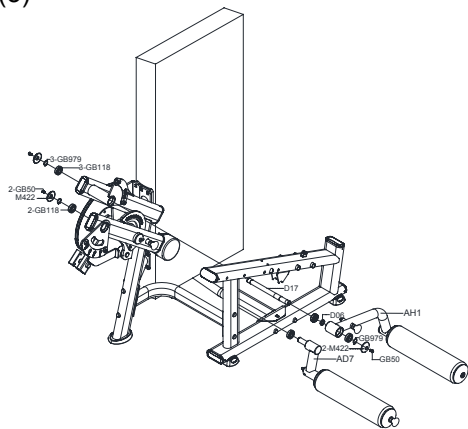



REF#	DESCRIPTION	SPEC.	QTY.
AD7	Leg pad welding group		1
AH1	Leg pressing pad welding group		1
D06	Spacer sleeve	φ30	1
D17	Long axis	φ25*308	1
M422	Bearing cover	φ60	3
GB118	Deep groove ball bearing	GB6005	5
GB979	25 Axis circlip		3
GB50	Hexagon socket flat round head screw	M8*25	3

(4)

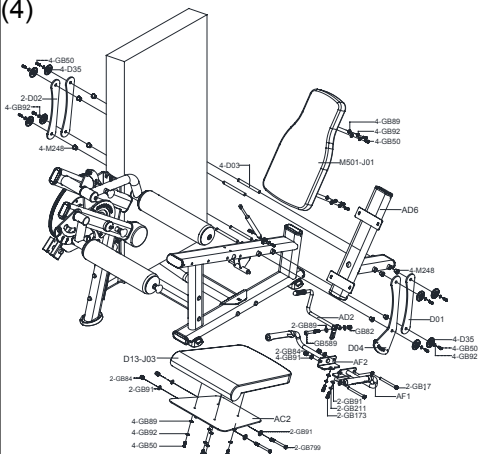


REF#	DESCRIPTION	SPEC.	QTY.
AC2	Seat plate welding group		1
AD2	Handle welding group		1
AD6	Backrest welding group		1
M501-J01	Backrest Cushion		1
D13-J03	Seat cushion		1
AF1	Left handle group		1
AF2	Right handle group		1
D01	Connecting rod fixing plate		1
D02	D-type connecting rod fixing plate		2
D03	Connecting rod fixed shaft		4
D04	Adjusting plate		2
D35	Shaft fixing cover	φ49*5,0	8
M248	Nylon sleeve		8
GB50	Hexagon socket flat round head screw	M8*25	16
GB89	Flat washer	M8	10
GB173	Hexagon socket head cap screw	M12*30	2
GB589	Hexagon socket head cap screw	M8*60	1
GB799	Hexagon socket head cap screw	M12*120	2
GB17	Outer hexagonal bolt	M12*150	2
GB89	Flat washer	M8	10
GB91	Flat washer	M12	2
GB92	Spring washer	M8	16
GB211	Spring washer	M12	2
GB82	Hexagon lock nut	M8	1
GB84	Hexagon lock nut	M12	4

(5)

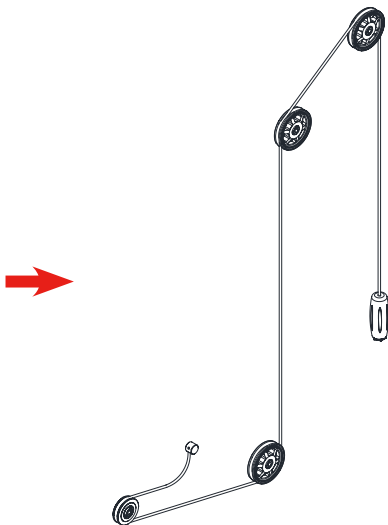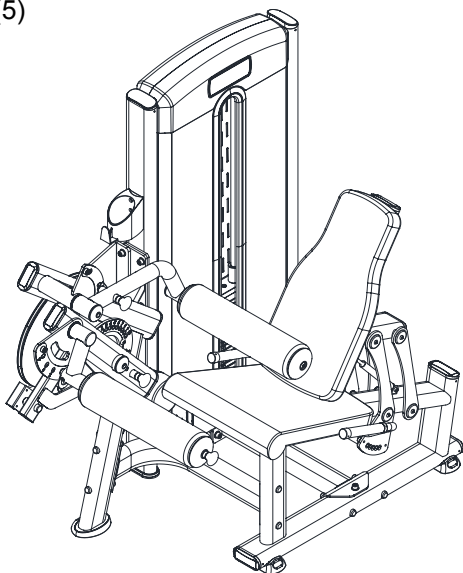


USAGE GUIDANCE (LEG CURL)

START

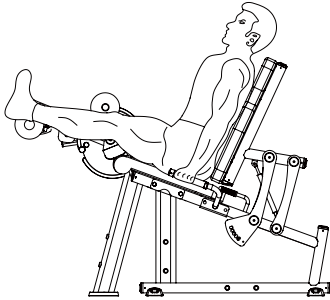

FINISH

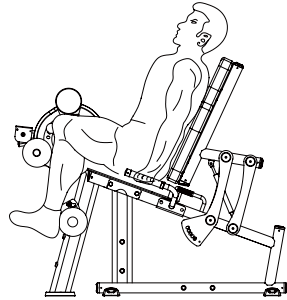

Instructions


Select an appropriate weight resistance according to personal condition. Adjust roller pads positions by pulling out pop pin on press arm so that the lower one rests on the middle parts between your calves and ankles; adjust it to an appropriate angle with knob on the end of roller pad; straighten your legs and sit with your back firmly against back cushion (as the diagram above shows). Grasp handgrips suitable for you. Please consult a coach if you are unsure.

Exercise Movement


Grasp handgrips with both hands, press against roller pad with legs and bend them toward your trunk, then return to the starting position slowly, ensuring that the moving weight plates do not touch the static ones. Repeat the movements. Please consult a coach if you experience any pain when you stop suddenly.

USAGE GUIDANCE (LEG EXTENSION)

START

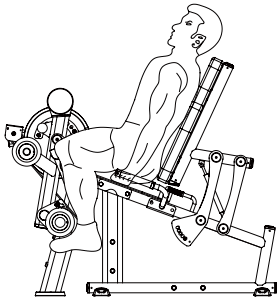

FINISH

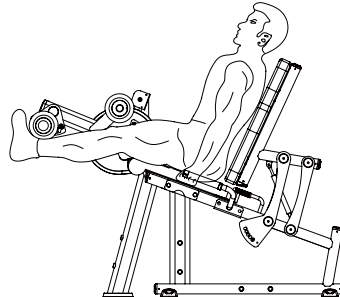

Instructions

Select an appropriate weight resistance according to personal condition. Adjust roller pads positions by pulling out pop pin on press arm so that the lower one rests on your ankles; press downward the yellow knob on your right till your legs are bent toward your trunk maximally, sit with your back firmly against back cushion (as the diagram above shows). Grasp handgrips suitable for you. Please consult a coach if you are unsure.

Exercise Movement

Grasp handgrips with both hands, exert forces with both legs and press them against roller pad, do leg extensions, then return to the starting position slowly, ensuring that the moving weight plates do not touch the static ones. Repeat the movements. Please consult a coach if you experience any pain when you stop suddenly.

EXERCISE NOTICES

1. 5~10 minutes of warm-up must be taken prior to having exercise on this machine. Record the time while having free exercise which aims to activate the joints in case of injury to them during training.

2. Inspection must be carried out prior to using the machine. For any potential problem, please contact the coach or maintenance staff immediately. Do not use it before it's assured that it can operate correctly.

3. Do not use the machine if there's a sign on it that tells it malfunctions.

4. Please take high-protein foods, vegetables and fruits. Have a meal 40 min prior to the exercise and another meal no sooner than 30 min after it. A small amount of water can be taken during exercise.

5. Inhale when you exert yourself; exhale when you relax. Adjust breath according to movements.

6. The next workout for same muscle must be taken after at least 48 hours of rest.

7. Weight resistance should be selected according to personal condition. Excessive weight must not be taken in case of injury to muscles. The training must be proceeded in an orderly way and step by step. It is normal to feel slight pain in the muscles during the first workout.

MAINTENANCE AND TROUBLESHOOTING

1. Inspect bolts at all mechanical parts frequently for tightness; rotating parts should rotate smoothly without producing any abnormal sound.

2. When the machine is static, steel cable should be tightened while weight plates should not be suspended.

3. The machine should be kept clean but not wiped with strong cleaning solvents.

4. Bolts at all the adjustment parts should be tightened after adjustment in case of slack.

5. If any loading part, e.g., steel cable, pulley, pulley case, weight plate, is abraded or damaged, it must be replaced immediately; the machine can only be put into use after repair.

Basic Troubleshooting

Fault	Reason	Solution	Remarks
Unstable Frame	A. Uneven floor or foreign object B. Unadjusted leveling feet after assembling frame	Remove foreign object, Loose main frame bolts, adjust leveling feet, tighten the bolts	Owner
Idle running during operation	Steel cable is too loose	Tighten steel cable	Owner
Impact on steel cable during resetting	Steel cable is too tight; weight plates are suspended	Loosen steel cable	Owner
Pulleys cannot rotate	Steel cable is stuck between pulley and pulley case	Dismantle pulley and reassemble it	Owner
Abnormal sound at rotating part of pulley	A. Abraded or damaged pulley B. Abraded or damaged pulley cover C. Abraded or damaged bearing D. Abraded or damaged steel cable	Replace pulley Replace pulley cover Replace bearing for pulley Replace steel cable	After-sales Service
Abnormal sound at other rotating part	A. Abraded or damaged bearing B. Loose bolt C. Incompletely engaged pin	Replace bearing Tighten bolt Get pin fully engaged	After-sales Service Owner Owner

If the machine malfunction is not referred in the text above, please contact the customer service centre or call us, you'll receive satisfactory service.

PREVENTIVE MAINTENANCE

1. Daily Inspection

Clean and inspect machine frame every day; clean upholsteries; inspect steel cable and the terminals for abrasion.

Clean upholsteries and machine frame with neutral soapy water, remove dirt, oil stain and perspiration on the surfaces and air dry them completely. Inspect the frame for rupture, rustiness and other damage. Make sure that soldering points and fastening parts are correctly fixed.

Fastening parts may get loose during normal use; therefore, please inspect all the nuts, bolts, screws and other fastening parts, make sure they are well tightened and correctly assembled. The machine can only be put into use when no problem is found.

Regular inspections of steel cable, pulleys, fastening parts and other accessories must be carried out. Frequently used cable may be damaged and broken due to abrasion; sudden damage or rupture may cause severe injuries to users. Hence, daily inspection of cable and connections at the terminals must be implemented. Check whether there's kink or abrasion, whether sheath and terminals are damaged. Special attention must be paid to the terminals and the parts of cable which are in contact with pulleys. **Damaged cable must be replaced immediately in case of injury to users.**

Characteristics of Obvious Steel Cable Damages (Picture 1)

(1) A tear or crack in the cable sheath that exposes the cable; or the part of sheath which pulley contacts is cracked.

(2) Z-type twist or a curled sheath.

(3) Kinks which indicate that internal of cable may be damaged.

(4) Necking-A stretched cable sheath.

(5) Cable sheath gets inflated.


In addition, the following inspections must be carried out.

(1) Make sure that steel cable is correctly adjusted and securely fastened to the top of weight plates. Make sure that cable is securely connected to pulleys and all assemblies are well fixed, all the seven cable strands pass through the selector bar and screws are well tightened.


(2) Wipe and clean all warning/instruction stickers. (Picture 2)

(3) After some time of use, steel cable may get loose due to stretches. It can be solved by adjusting the hexagon nut on the head plate in time; tighten hexagon nut in case of slack. If it fails, cut a small section of the cable and refasten it. (For adjustment and assembly of steel cable, please check Assemble Weight Cage, ASSEMBLY INSTRUCTIONS.)

Picture 1:

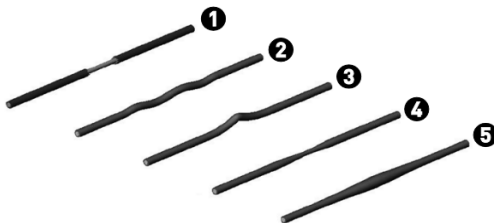

Picture 2:

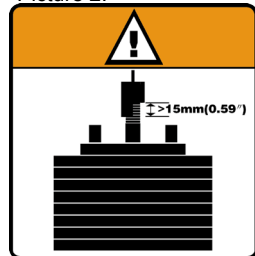

2. Weekly Inspection

Clean upholsteries; clean and lubricate cable rod end; clean and lubricate guide rods; inspect cable, connecting parts, and cable tension; inspect cable accessories; inspect pulleys; inspect each weight plate and selector pin; inspect and lubricate bearings and bushings; inspect seat adjustment system; test the pop pin.

(1) Clean upholsteries with special detergent. **Note: It must be neutral detergent. Never use detergent which contains solvent, ethanol, ammonia or petroleum.**

(2) Inspect heim joint and assure that the shoulder screw is well tightened. If there's noise inside the heim joint, lubricate it with silicone oil as shown in Picture 1 on Page 18. Wipe them with cloth to remove excessive oil.

(3) Inspect the exposed parts of guide rods; keep them clean; remove dirt

and oil stain on the rods with soft cloth. (Note: You can only inspect, clean and lubricate guide rods after dismantling shrouds.)

(4) Spray silicone oil onto the exposed parts of guide rods or cloth, and then wipe guide rods with cloth. **Never lubricate the rods when the machine is in use; the parts which are hidden in weight plates can only be lubricated after the weight plates are removed, otherwise, it will cause severe injuries.**

Reminder: Do not use petroleum-based lubricant; it will lead to rapid accumulations of dirt and hair on weight plates and may get the weight plates stuck to each other.

(5) Inspect and test steel cable and the links thoroughly every week; inspect cable tension.

(6) Inspect cable connection at weight plates. Make sure that the bolt makes at least 10 turns (15mm) towards the selector bar. Inspect the two thin nuts at both ends of the nut and ensure that they are securely tightened.

(7) Inspect steel cable; pay special attention to parts which are in contact with pulleys and cams. Inspect links at cams; inspect bolts which pass through parts on the top of cams and assure that set screws are tightened.

(8) Inspect steel cable; make sure all connections are firm and secure, tension is appropriate and steel cable is correctly fixed on the top of weight plate.

(9) Inspect pulleys: check if there's abrasion, flaw, breach or deletion. Abrasion of pulley surface can lead to severe damage to steel cable. Therefore, abraded or damaged pulley must be replaced immediately. Make sure pulleys can revolve flexibly during usage and do not sway to left and right with big amplitude. Big amplitude indicates that set bolt or bearing is damaged; in this case, dismantle pulley and inspect it. If any damaged bearing, it must be replaced immediately.


(10)Inspect weight plates and selector pin: check if there's burr or damage; wipe each weight plate and guide rod to remove dirt and dust. Make sure that selector pin can be fully inserted into each weight plate and stably retained there (Picture 2).

(11)Inspect bearings and lubricate shaft bushing: it's recommended that a small amount of silicone oil should be used for lubricating shaft bushing which is used for supporting shaft. Spray the oil onto shaft and twist the shaft several laps inside shaft bushing; meanwhile, check whether the bushing is excessively abraded or damaged.

Picture 1:



Picture 2:

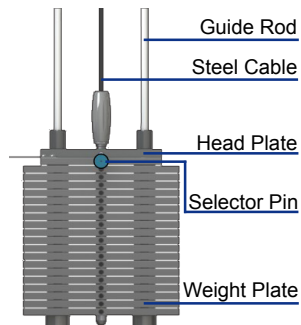

3.Monthly Inspection

(1)Inspect main frame and press arms: lubricate pop pin; inspect and lubricate seat post; inspect all fastening parts.

(2)Inspect main frame and press arms: check if they are complete and work normally; check if there's cracking, peeling paint or rustiness. Repair or replace the parts according to actual condition.


(3)Check if main frame is cracked. Pay special attention to solder joints. If any crack, suspend the machine immediately and contact maintenance staff to repair it.

(4)Check if there's rust or peeling paint on frame; if yes, wipe it gently with wet grainy cloth, dry emery cloth, or steel wire (fine thread) ball and then repair paint chips.


(5) If the selector pin cannot be easily inserted into weight plate, check whether the selector bar swings leftward and rightward when it's in vertical position. (Picture 1)

(6) Pull out the pop pin; spray a small amount of silicone oil onto it; wipe it and remove excessive oil. (Picture 2)

Picture 1:

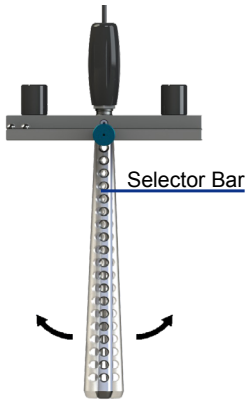

Picture 2:

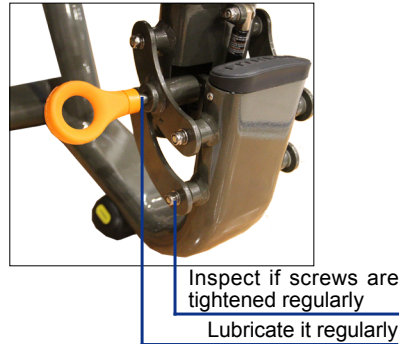

4. Annual Maintenance

(1) Dismantle shrouds and carry out necessary maintenance. It's recommended that one should dismantle weight plates, clean and inspect them thoroughly. Carefully take steel cable and guide rods off weight plates; clean and inspect each weight plate; inspect guide rod bushing. If any damaged part, replace it immediately. Clean guide rods and the selector bar; reassemble weight plates and shrouds. We recommend that abraded or damaged cable get replaced during regular maintenance; and all cables should be replaced with new ones annually.

(2) Inspect and lubricate the pop pin.



GARLANDO SPA
Via Regione Piemonte, 32 - Zona Industriale D1
15068 - Pozzolo Formigaro (AL) - Italy
contact@toorxprofessional.it
www.toorxprofessional.it